 


RAINMAL

PRO Hair Straightening Comb

RN-ST-004-SGL

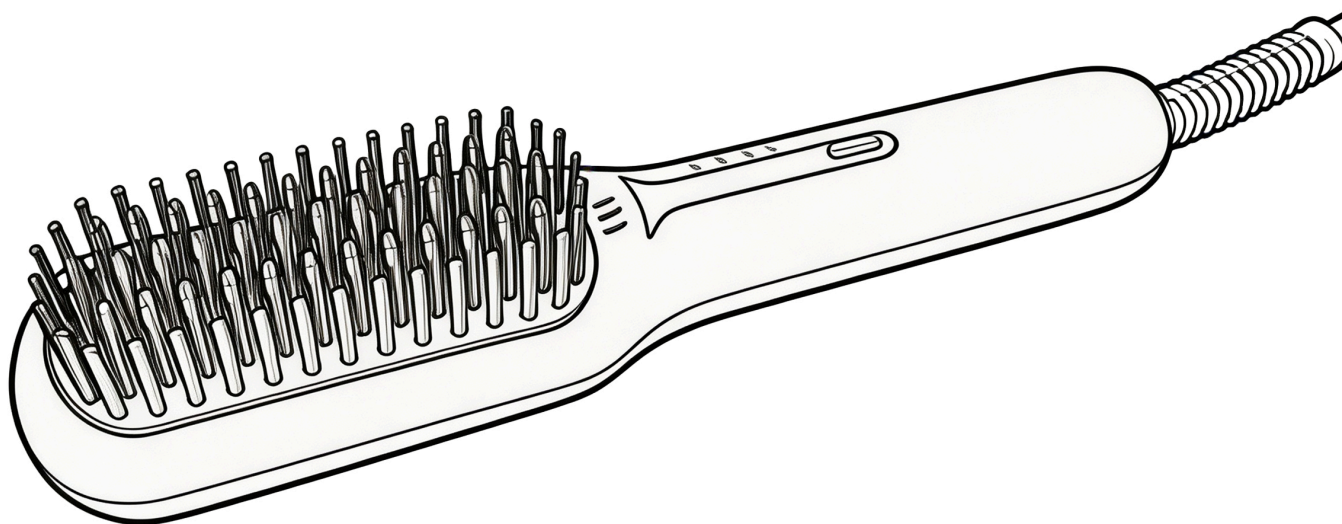

USER MANUAL

ENGLISH

Thank you for choosing RAINMAL. Read this manual carefully before use. Keep away from water. Always unplug after use.

rainmalservice@gmail.com

SPECIFICATIONS

Model	RN-ST-004-SGL
Product	Hair straightening comb
Power supply	220 V~ / 50 Hz
Rated power	25 W
Heating method	PTC heating
Maximum temperature	220°C

Standards listed in the supplied specifications: GB 4343.1-2018; GB 17625.1-2022; GB 4706.1-2005; GB 4706.15-2008.

PACKAGE CONTENTS

Remove all packaging materials before use. Ensure none remain on the heated surfaces.

RAINMAL PRO hair straightening comb	1
Glove	1
Hair clips	2
Fine-toothed comb	1

SAFETY INSTRUCTIONS

Read all instructions before use. Keep away from water and keep hot surfaces away from children.

DANGER — ELECTRIC SHOCK

Electrical parts may remain live while the appliance is plugged in, even when switched off.

1. Unplug immediately after use.
2. Do not use while bathing or in the shower.
3. Do not place or store where the appliance could fall or be pulled into a bath or sink.
4. Do not immerse in water or any other liquid.
5. If the appliance falls into water, do not reach for it. Unplug immediately.
6. Unplug before cleaning.


SAFETY INSTRUCTIONS

WARNING — BURNS AND FIRE

1. Never leave the appliance unattended while plugged in.
2. Close supervision is necessary when used by, on or near children or people who need assistance.
3. Use only for the intended purpose described in this manual.
4. Do not use if the cord or plug is damaged, the appliance malfunctions, or it has been dropped, damaged or immersed in water.
5. Keep the cord away from heated surfaces. Do not wrap it around the appliance.
6. Never use while sleeping.
7. Do not use outdoors or where aerosol sprays are being used or oxygen is being administered.
8. Do not use an extension cord.
9. Heated surfaces can burn. Avoid contact with eyes, scalp and bare skin.
10. Place the hot appliance only on a suitable heat-resistant surface.
11. Store in a dry area. Do not store above 60°C (140°F).
12. Do not plug in or unplug with wet hands.


HOW TO STRAIGHTEN

1. Prepare clean, completely dry hair. Detangle with the fine-toothed comb and divide into equal, small sections.
2. Lift one section and position the heated bristles against the hair near the roots, keeping them away from the scalp.
3. Glide slowly and evenly from roots to ends. Keep the comb moving.
4. Repeat across the remaining sections until the desired finish is achieved.

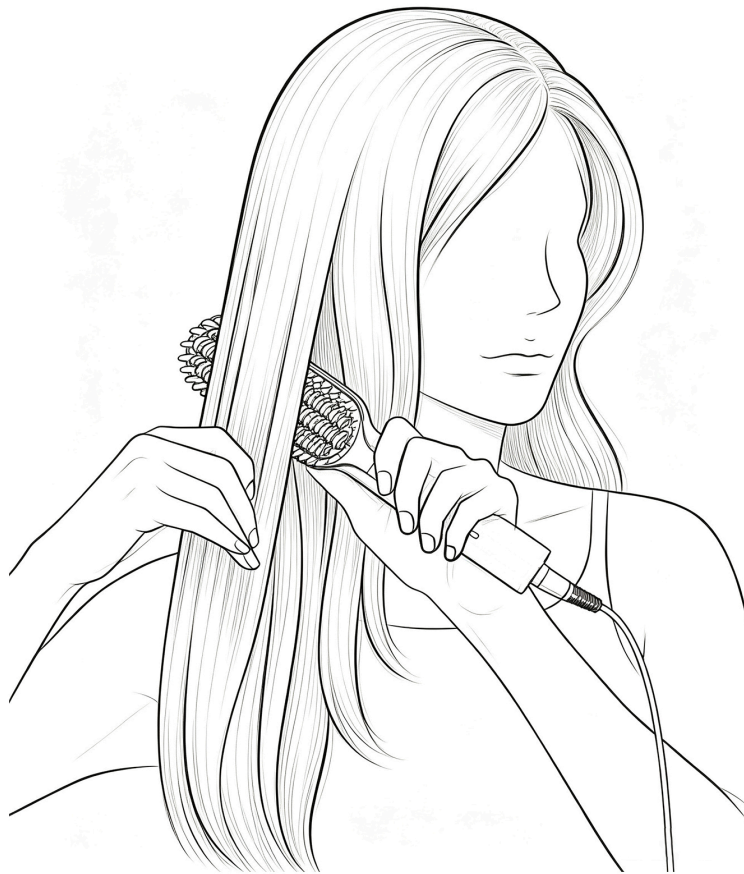

HOW TO STYLE CURLED ENDS

1. First follow the straightening steps. Divide the hair into even sections.
2. For outward-curved ends, turn the comb outward and guide the ends around it. Hold briefly for 3–5 seconds, then release.
3. For inward-curved ends, turn the comb inward and guide the ends around it. Hold briefly for 3–5 seconds, then release.
4. The supplied guide suggests up to three repetitions. Avoid unnecessary repeated heating and allow the hair to cool before finishing.

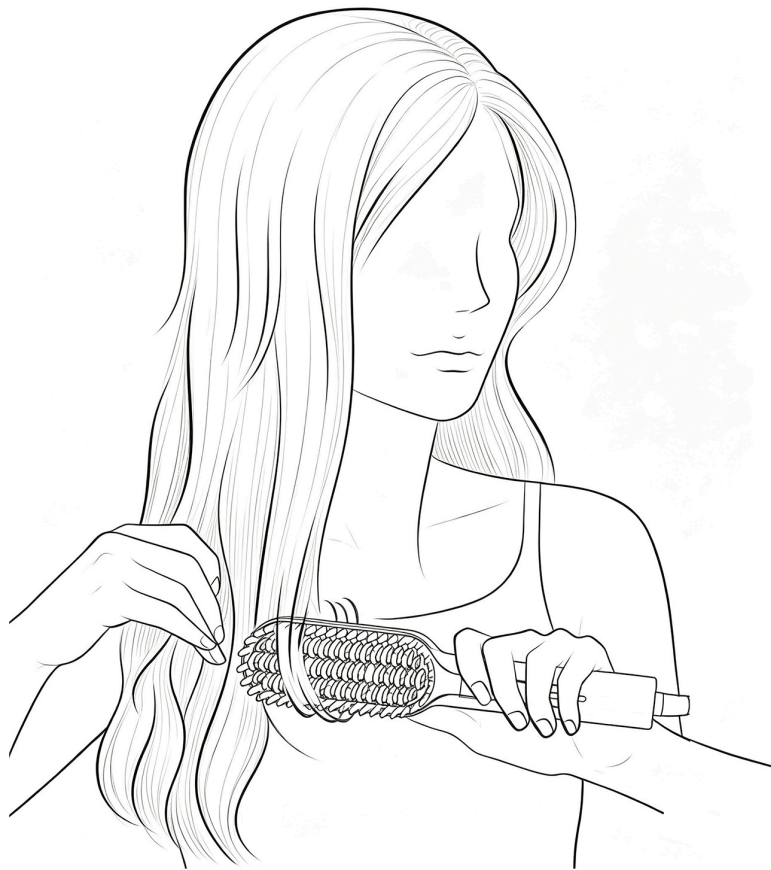

TEMPERATURE AND STYLING

Use the lowest effective setting for your hair. Allow the comb to reach the selected temperature before styling. Maximum temperature: 220°C.

Fine or easy-to-style hair	160°C
Normal-textured hair	180°C
Wavy or curly hair	200°C
Thick or hard-to-style hair	220°C

Why do curled ends not hold?

1. Style only completely dry hair and avoid humid surroundings.
2. Use small sections, about 2.5–5 cm (1–2 in) wide.
3. Guide the comb at a slow, controlled pace.
4. Allow each section to cool before loosening it. Do not hold hot hair in your palm.
5. Apply a finishing product after heat styling, with the appliance switched off and away from sprays.
6. Once cool, loosen gently with your fingers rather than brushing.

TROUBLESHOOTING

Burning smell, smoke or visible vapour

Stop styling, switch off and unplug. Allow the appliance to cool. Check that the hair is completely dry and that the cooled comb is clean. Do not continue if smoke or a burning smell persists; contact customer support.

Hair does not straighten well

Use clean, dry, thoroughly detangled hair. Work with sections about 2.5 cm (1 in) wide. Reduce the amount of hair in each section if needed.

The comb does not heat or results are weak

Check the power connection and selected temperature. Wait until the selected temperature is reached. Use smaller sections. If the appliance still does not heat, stop using it and contact support.

MAINTENANCE AND STORAGE

1. Switch off, unplug and allow the appliance to cool completely before cleaning or storing.
2. Wipe dust and dirt away with a dry cloth. Do not immerse the appliance.
3. There are no user-serviceable parts. Do not attempt repairs.
4. Store in a safe, dry place out of reach of children.
5. Do not wrap the cord around the appliance. Untwist it before use and fold it loosely as originally packaged.

For help or additional product information, contact RAINMAL customer support.

rainmalservice@gmail.com